

## Control AIO GATEWAY cloud access

If the cloud access has been setup for an AIO GATEWAY, it can be controlled with the AIO REMOTE NEO by assigned one of the following actions to a button:

1. "remote access on" ← Always control the gateway via remote access.
2. "remote access off" ← Always control the gateway over the local network.
3. "remote access auto" ← The AIO REMOTE NEO decides on its own which to use.

The following status can be assigned to a text element:

1. "remote access state" ← Returns "local" or "remote".
2. "remote access setting" ← Returns "on", "off" or "auto" depending on the current setting.

From:

<https://doku.mediola.com/> - **Dokumentationen**

Permanent link:

<https://doku.mediola.com/doku.php?id=en:creator:aio-remote-gateway-remote>

Last update: **2017/03/01 11:39**

