

Setup your AIO GATEWAY via ConfigTool NEO

To use your AIO GATEWAY with AIO CREATOR NEO you have to configure it for your network first. For this purpose you can use the free Configtool-Software, which is available in two versions.

AIO GATEWAYS of V5 series

Please use ConfigTool NEO for all AIO GATEWAYS of the new V5 series. For the online documentation of ConfigTool NEO click → [here \(http://doku.mediola.com\)](http://doku.mediola.com).

older AIO GATEWAY versions

Please use ConfigTool for all AIO GATEWAYS of the new V4 series and lower. For the online documentation of ConfigTool click → [here \(http://doku.mediola.com\)](http://doku.mediola.com).

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

<http://doku.mediola.com/doku.php?id=en:creator:configtool>

Last update: **2017/04/05 13:00**

