

## Alarm status

If you are not sure what the current alarm status is, go to Settings → Alarm. Tap Status. There you can see the current status for each gateway (if several are used).

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

[http://doku.mediola.com/doku.php?id=en:iqontrol\\_neo:alarm\\_status](http://doku.mediola.com/doku.php?id=en:iqontrol_neo:alarm_status)

Last update: **2020/07/20 17:09**

