

Device restrictions

Device restrictions apply to the alarm. Not all window sensors or alarm keys can be used as triggers or to activate / deactivate the alarm.

The following can be used as triggers:

brand	device
Eimsig	Door / window sensor FGSE, FSE, USE with the profiles (A5-14-01), (A5-14-07) and (A5-14-09)
	Door / window sensor FGSE additional with the profiles (A5-14-03), (A5-14-08) and (A5-14-0A)
Eltako	Window handle FFG7B (A5-14-09)
	Window handle FFG7B (F6-10-00)
	Window handle FHF
	Door / window sensor FTKB
	Door / window sensor FTKB-hg
	Door / window sensor FTK
	Door / window sensor FTKE
	Fenstergriff TF-FGB (a5-14-09)
	Fenstergriff TF-FGB (f6-10-00)
	contact sensor TF-FKB
	contact sensor TF-FKE
	Motion sensor FABH65S
	Motion sensor FBH63AP
	Motion sensor FBH65B
	Motion sensor FBH65S
	Motion sensor FBH65TFB (motion)
	Motion sensor TF-BHSB (TF mode)
	Motion sensor TF-BHSB (FBH mode)
	Motion sensor TF-BSB55
Homematic IP	HmIP-SWDO-I
	HmIP-SWDO
	HmIP-SRH
	HmIP-SWDM
	HmIP-SMI
	HmIP-SMI55
	HmIP-SMO
	HmIP-SMO-A
MACO	mTRONIC Multisensor
OPUS	Door-/window handle
	door handle
	Door / window sensor
	SMS-Presence
	SMS-Standard
Roto	Com-Tec Basic (a5-14-01)

brand	device
	Com-Tec Basic (d5-00-01)
	Com-Tec Comfort
	Com-Tec Comfort S
Rehau	SmartGuard Window Sensor
	SmartGuard 2 Window Sensor
Winkhaus	Window Sensor FM.A
	Window Sensor FM.V (D5-00-01)
	Window Sensor FM.V (A5-14-01)

The following can be used as alarm keys for activating / deactivating the alarm:

- All Homematic IP buttons and handheld remote controls (e.g. HmIP-KRCA, HmIP-RC8 etc.)

The following can be used as devices for acoustic confirmation of activation / deactivation and as an alarm siren:

brand	device
Homematic IP	Alarm siren HmIP-ASIR
Sonos	Play modells

All actuators created in the system can be used as device actions.

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

http://doku.mediola.com/doku.php?id=en:iqontrol_neo:geraetebeschaenkungen

Last update: **2020/07/24 12:57**

