

## Dynamic status image

For an image element can display a dynamic status, it is necessary to assign a status device in the status section of the properties menu (if no status device has been assigned, the element is automatically a 'simple' image).

If a status device has been assigned, you can only select status images from the NEO image catalog. These status icons are images sets consisting of multiple images. Each image indicates a special status of the device.

Further reading: [How to import your own status images](#)

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

<http://doku.mediola.com/doku.php?id=en:creator:ui-remote-stategraphics>

Last update: **2020/03/10 14:57**

