

## MANUAL IQONTROL NEO

### Contents

- [First Steps: About IQONTROL NEO & Account](#)
  - [How to integrate the AIO GATEWAY into IQONTROL NEO](#)
  - [The User Interface: IQONTROL NEO dashboard](#)
  - [The Main Menu](#)
- [Add rooms and devices](#)
  - [Integrate IP-cameras](#)
  - [Add Cloud Devices](#)
  - [Integrate IP devices and IP gateways](#)
  - [Add IR-Devices](#)
  - [Direct links between devices](#)
- [Create scenes](#)
- [Create tasks](#)
  - [Push messages](#)
  - [Use Open Weathermap](#)
  - [Alarm tasks](#)
  - [calendar: overview of time-scheduled tasks](#)
- [Heating schedules](#)
- [Gateway settings](#)
- [Z-Wave, Zigbee and EnOcean: Activate extensions for V5 Plus](#)
- [Save & load configurations](#)
  - [Save restricted configuration](#)
- [Remote mode](#)
- [Voice control & more: Upload to the mediola cloud](#)
- [FAQ](#)
- [Changelog](#)

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

[http://doku.mediola.com/doku.php?id=en:iqontrol\\_neo:start](http://doku.mediola.com/doku.php?id=en:iqontrol_neo:start)

Last update: **2019/10/07 17:19**

