

Firmware Update

The ConfigTool always indicates the currently installed (current) and the latest available firmware (latest). From time to time you should check with the ConfigTool whether a new firmware is available for your gateway. You can install the new firmware by clicking the „Update firmware“ button in the setup mode.



Important note: Never disconnect the Gateway while a firmware update is running.

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

<http://doku.mediola.com/doku.php?id=en:creator:configtool-general>

Last update: **2016/01/14 11:57**

