


Network settings

To use the AIO GATEWAY it is necessary to adapt the IP-Settings to your local network (Tab "Network"). Select the „Network“ Tab and click the Setup Button. Here a password is required. The original password in the factory settings is: „admin“. Now you can enter the setup-mode and are able to change all settings (passwords, names, etc)



If you don't know how to set your IP-Settings correctly, please use the „Suggest network settings“ functionality to generate valid IP-Settings automatically. Click „Save“ to store the changes.

Vorsicht: You should only use this feature if you are not familiar with the manual configuration of network settings. An automatic setup may cause a non-compliant use of DHCP functions.

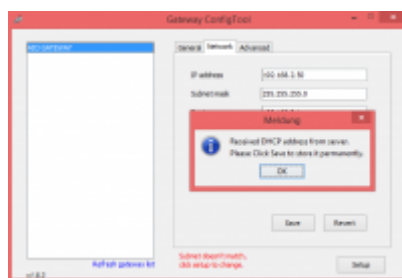

Use the “Revert”-Button to undo the changes.

From:
<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:
<http://doku.mediola.com/doku.php?id=en:creator:configtool-networksettings>

Last update: **2016/01/14 12:02**

