


A PIN is required to activate / deactivate the alarm.

The default PIN is 0000

Before the alarm can be used, the default PIN must be changed. If the PIN is forgotten, there is no way to reset it. The PIN is reset to 0000 when the entire system is reset.

To change the PIN, go to Settings → Alarm. Tap on “PIN”. Enter your current PIN and the new PIN. The PIN consists of 4 digits from 0-9.

The PIN is also used to lock the gateway.

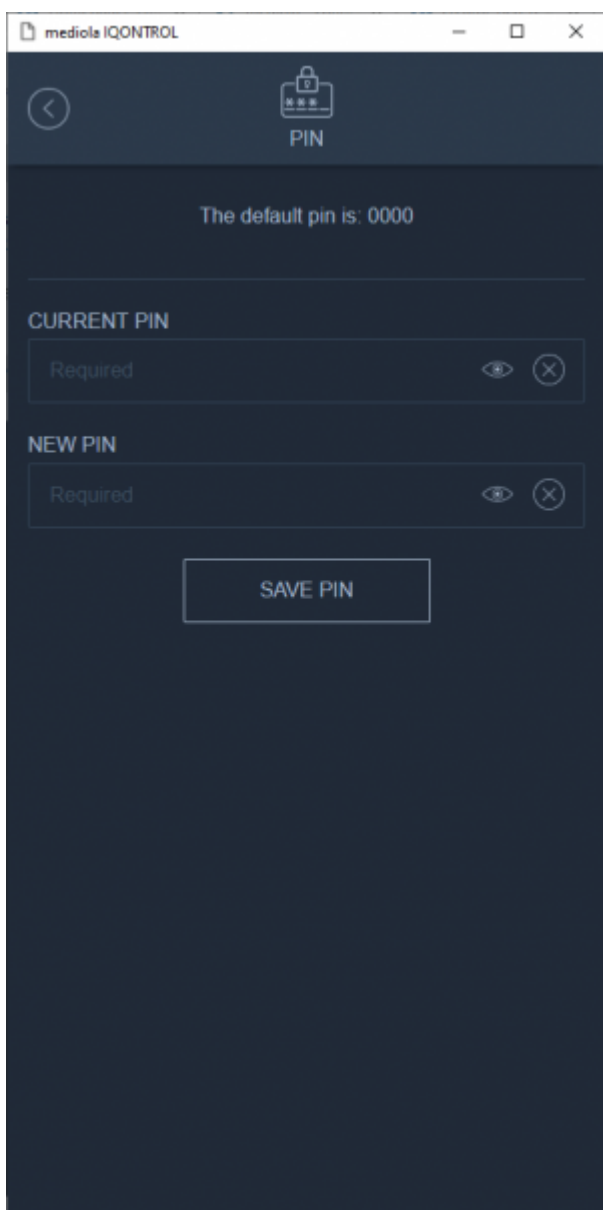

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

http://doku.mediola.com/doku.php?id=en:iqontrol_neo:alarm_pin

Last update: **2020/07/21 15:29**

