


## Reset alarm

If it is necessary to reset the alarm, this can be done in the gateway settings. To do this, go to Settings → Gateways. Select the gateway on which you want to reset the alarm and go to the expert settings.

**Caution:** All alarm settings are lost. The PIN will not be reset to the default.

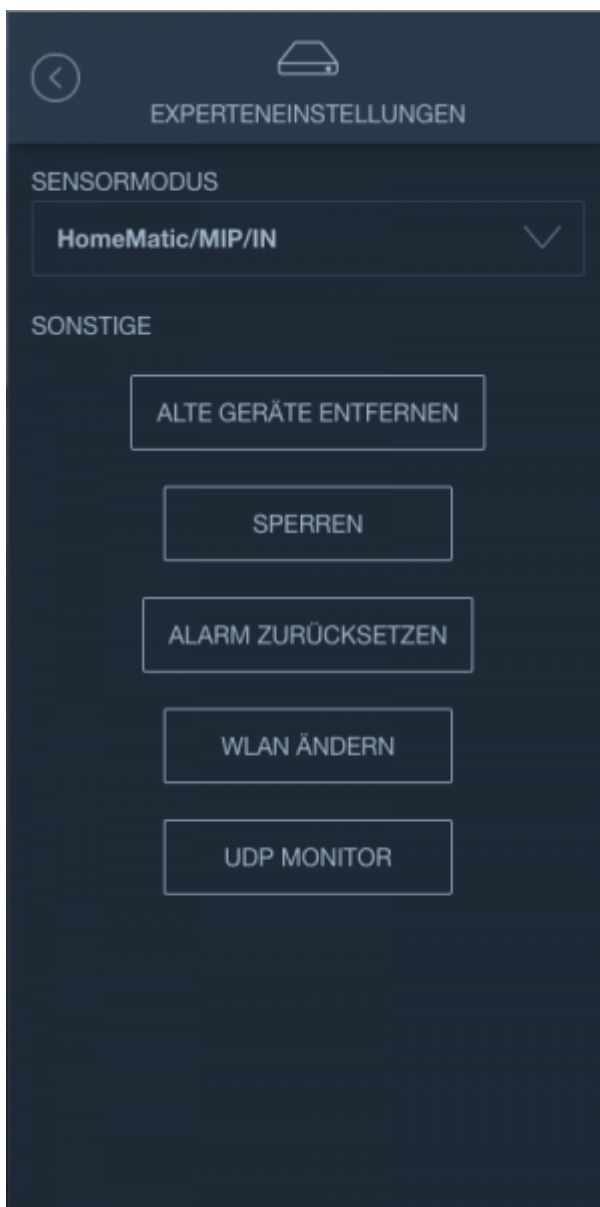

After resetting the alarm, you can configure new alarm settings again.

From:  
<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:  
[http://doku.mediola.com/doku.php?id=en:iqontrol\\_neo:alarm\\_reset](http://doku.mediola.com/doku.php?id=en:iqontrol_neo:alarm_reset)

Last update: **2020/07/21 14:22**



