

## Quick Reference EASY LED Controller Plugin

### Integrate EASY Smarthome EASY LED Controller as a gateway

If you are using the AIO CREATOR NEO with a EASY Smarthome plug-in, you can integrate the EASY LED Controller as a gateway in the device manager. For this purpose you can use the „search gateway“ button, to import the configuration of your EASY LED Controller automatically. Alternatively you can configure your EASY LED Controller manually by clicking the „new gateway“ button.

Important note: The EASY LED Controller can only be found and imported automatically, if it is in the same subnet as the computer, on which the AIO CREATOR NEO software is used.

If your EASY LED Controller has not been found automatically, you can configure it manually. In this case please click the „new gateway“ button. Now enter a name, select the type (EASY LED) and enter IP-address, Port-Number, User and - if necessary - User and Password.

2015/11/24 08:38

### Create an EASY LED device

After integration of the EASY LED Controller as a gateway in the device manager, you now can create an EASY LED device by following the steps below:

1. Go to the devices tab of the device manager and click the „add device“ button
2. Enter a name and select a room
3. Select „Easy LED“ in the gateway dropdown.
4. Then select “type” and “address”

2015/11/24 08:38

From:

<https://doku.mediola.com/> - **Dokumentationen**

Permanent link:

<https://doku.mediola.com/doku.php?id=en:pdfs:creator:easy-led>

Last update: **2016/02/01 15:59**

