


Changing IP-Address

To change the IP-address of an AIO Gateway V5 you have to go to setting page of the gateway. There you have to select "Network".

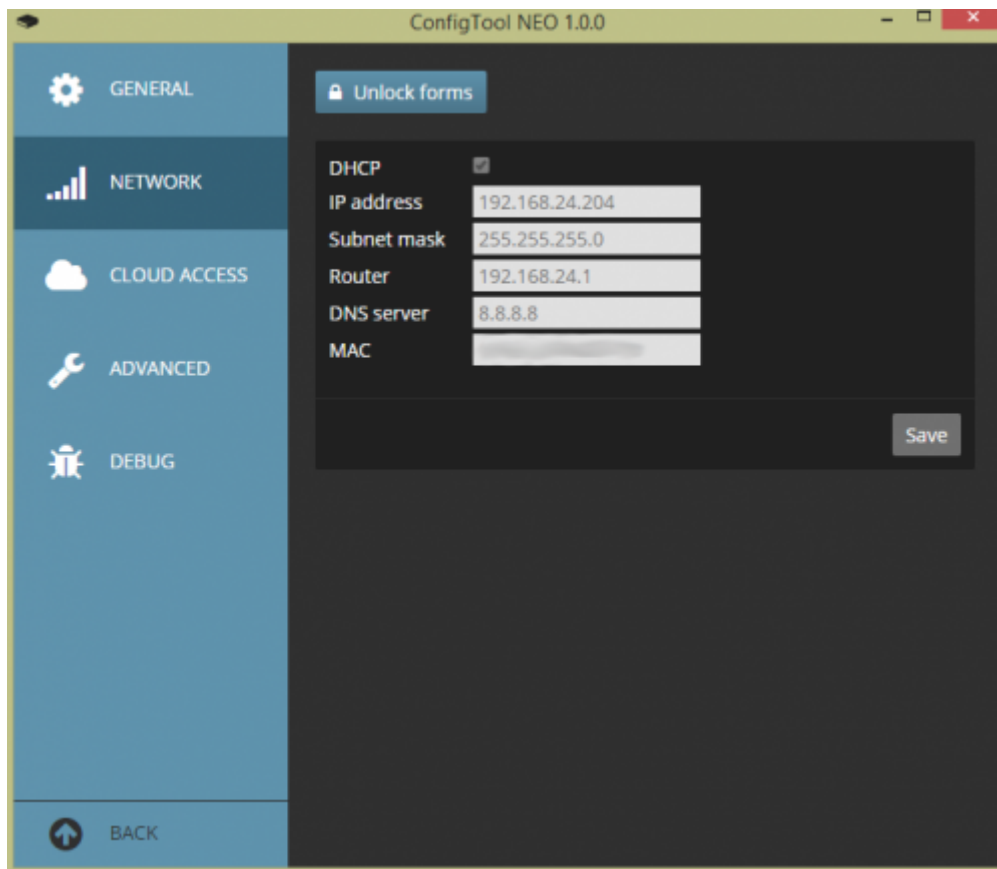

If you want to change the network settings you have to remove the mark from "DHCP". This option should be used only by advanced users with network skills.

ConfigTool NEO 1.0.0

GENERAL

NETWORK

CLOUD ACCESS

ADVANCED

DEBUG

BACK

Unlock forms

DHCP ☐

IP address 192.168.24.220

Subnet mask 255.255.255.0

Router 192.168.24.1


DNS server 8.8.8.8

MAC

Save

Now all forms are editable besides “MAC”. You can now edit the IP-address, the subnetmask, the router-ip and the DNS-server.

If you want to give your device a static IP then you have to enter an IP-address. By clicking on “Save” your settings will be saved.

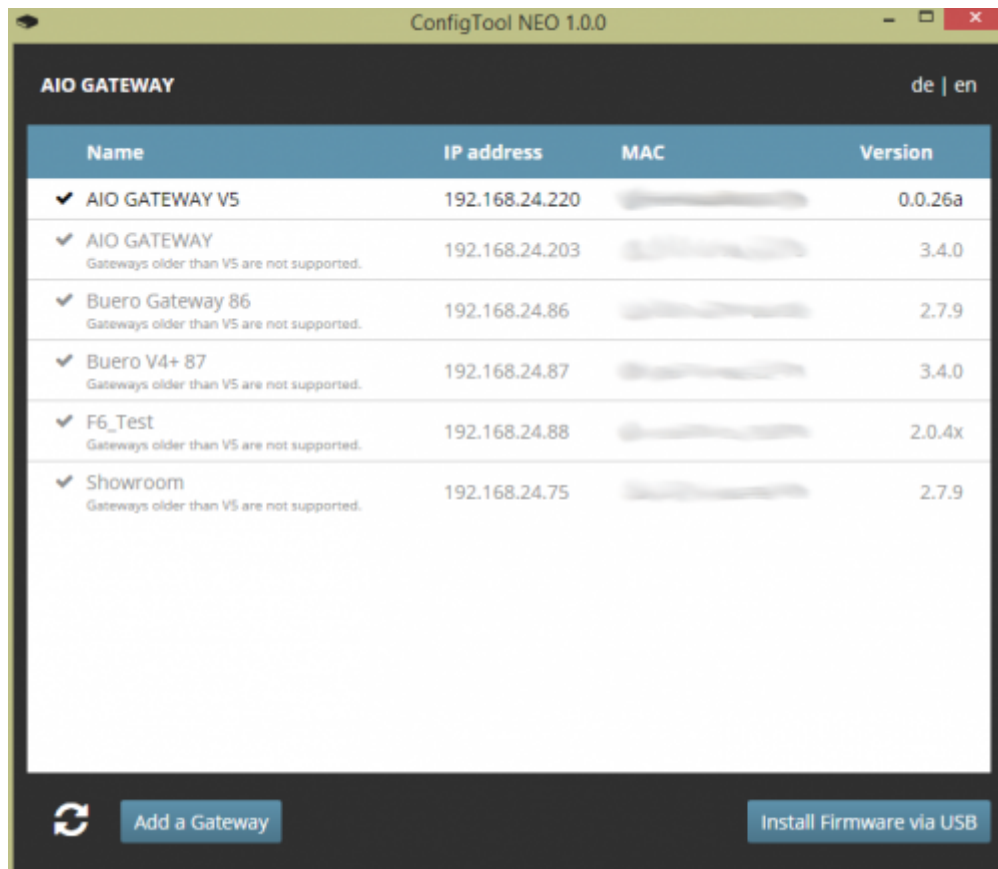

The IP-address of the device is now changed. The gateway is now reachable over your entered IP-address.

From:

<http://doku.mediola.com/> - **Dokumentationen**

Permanent link:

http://doku.mediola.com/doku.php?id=en:v5:network_settings

Last update: **2016/06/24 15:11**

