


## Change IP address

To change the IP address of the AIO GATEWAY V6, select the “Network” tab in the ConfigTool NEO.

To change the network settings of the AIO GATEWAY V6, uncheck “DHCP”.

It is highly recommended to only change the IP address, if you have appropriate expertise.

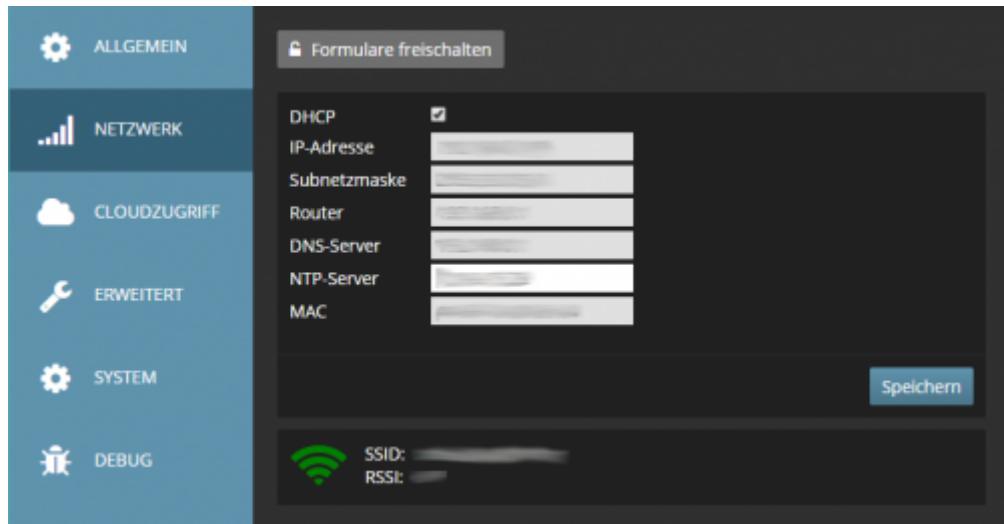

Now all fields are editable except “MAC”. You can change the IP address, subnet mask, router IP and DNS server.

If you want to assign a static IP (the gateway always has this IP), change the IP address to the desired address.

Click on “Save” to save the settings.

From:  
<https://doku.mediola.com/> - Dokumentationen

Permanent link:  
[https://doku.mediola.com/doku.php?id=en:v6:ip\\_aendern](https://doku.mediola.com/doku.php?id=en:v6:ip_aendern)



Last update: **2019/08/26 18:05**