


Up-/ download remote

→ Upload

To create a backup of your remotes and to easily transfer them to the AIO REMOTE NEO App on the mobile units, you can upload the remotes to your personal cloud-server account. To upload your remotes go to the *settings menu*, select *remote* and then *upload*. Or in the upper menu-bar. Once you have authenticated, you can select all remotes you want to upload by checkbox. If you don't have a personal account yet, you have to register first.

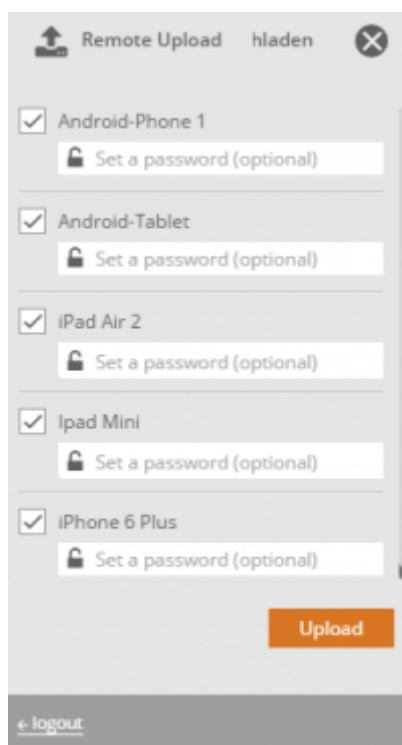


Note:


The upload to the cloud-server does not trigger an automatic update of the AIO REMOTE NEO App. To update the App you have to go to the settings menu of the App (two-finger-swipe up) and tap *Update remotes now*.

→ Download


In case of data loss you can also download your cloud-server remotes to your local PC. *Important:* Via *remotes* → *Download* only the design of the remote is downloaded. To download your device database aswell, select *synchronize databases* in the main menu. In order to download a device database, it has to be backed up via *synchronize databases* first.

To download a remote go to the *settings menu*, select *remote* and then *download*.

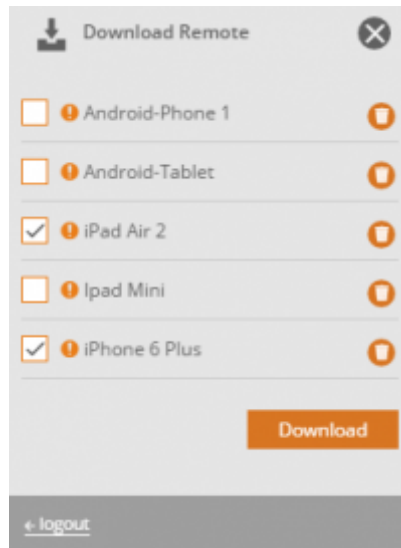

Once you have authenticated, you can select all remotes you want to download by checkbox. If you want to delete a remote from the cloud-server, click the -icon.

Important:

The -icon indicates, that this remote also exists on your local PC. If you download this remote, the local version will be overwritten by the cloud server-version.

From: <http://doku.mediola.com/> - **Dokumentationen**

Permanent link: <http://doku.mediola.com/doku.php?id=en:creator:ui-menu-remotes-load>

Last update: **2020/03/09 14:48**

