



Firmware Update

To update the firmware of the AIO GATEWAY V6, select the “General” tab in the ConfigTool NEO. If a firmware update is available, a notification appears in the ConfigTool NEO.

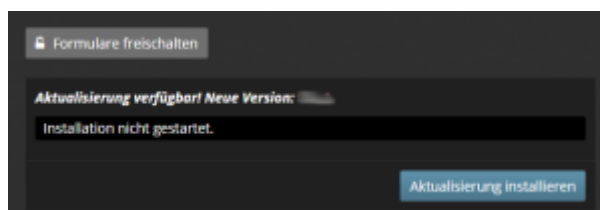


Click on “Install update” to start the update.

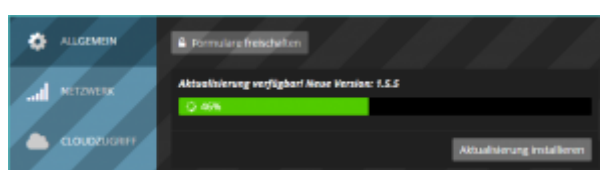

After the update has started, a process bar will show the process of the update. Once it has reached 100% and the update is completed, the AIO Gateway V6 restarts and you will automatically return to the start page of the ConfigTool NEO.

Manual firmware update

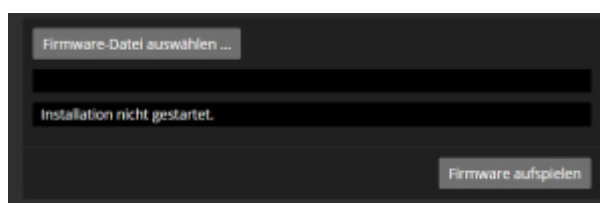

To update the firmware of the AIO Gateway V6 manually (or to install an older firmware version), you need the firmware as a file.

This can be downloaded [here](#).

With a click on “Select firmware file” you select the downloaded firmware file and start the Install process by clicking on “Install Firmware”.

From:

<https://doku.mediola.com/> - **Dokumentationen**

Permanent link:

<https://doku.mediola.com/doku.php?id=en:v6:firmwareupdate>

Last update: **2019/08/27 15:03**

