

PIN


Um den Alarm zu Aktivieren/Deaktivieren wird eine PIN benötigt.

Die voreingestellte PIN lautet 0000

Bevor der Alarm verwendet werden kann, muss die Default PIN geändert werden. Wird die PIN vergessen, gibt es keine Möglichkeit diese zurückzusetzen. Die PIN wird auf 0000 zurückgesetzt, wenn das gesamte System zurückgesetzt wird. Daher prägen Sie sich Ihre PIN gut ein.

Um die PIN zu ändern gehen Sie in die Einstellungen → Alarm. Tippen Sie auf „PIN“. Geben Sie Ihre aktuelle PIN und die neue PIN ein. Die PIN besteht aus 4 Ziffern von 0-9.

Die PIN wird auch zum Sperren des Gateways verwendet.

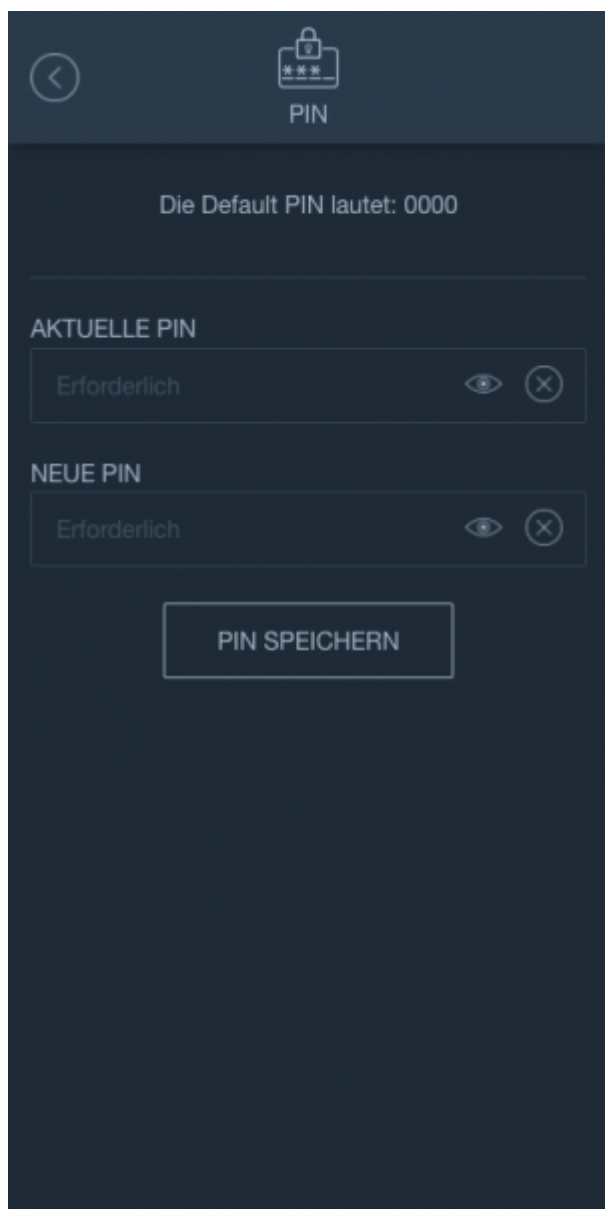

The screenshot shows a mobile application interface for setting a PIN. At the top, there is a back arrow icon and a lock icon with the text 'PIN' below it. The main content area has a dark background. It starts with the text 'Die Default PIN lautet: 0000'. Below this is a horizontal line. Then, there are two sections: 'AKTUELLE PIN' and 'NEUE PIN'. Each section has a text input field with the placeholder 'Erforderlich' and icons for toggling visibility (an eye) and clearing the field (an 'X'). At the bottom, there is a button labeled 'PIN SPEICHERN'.

From:
<https://doku.mediola.com/> - **Dokumentationen**

Permanent link:
<https://doku.mediola.com/doku.php?id=de:creator:ui-menu-devicemanager-aiogateway-alarmeinstellung-v6-pin>

Last update: **2020/09/02 10:49**

